



MAXLIGHT

H0112 Module

 
Installation Instructions

+Downlight Fittings

H0117/H0118/H0113
H0114/H0115/H0116

Dear Users,
Thank you for purchasing and using this product!
To bring you the better user experience, please read user manual carefully before using this product and keep the manual for further reference.

1. Model List

H0112	 Ø49.8x50mm	H0113 H0114	 IP54 Ø85x44mm
		H0117 H0118	 Ø105x25mm
		H0115 H0116	 Ø98x48.5mm

2. Product Specification

Power	Input Voltage	Cut-out
9W	AC200-240V 50/60Hz	Base on fitting option

3. Application

It's for commercial lighting and residential lighting use.

PL Zawsze wyłączaj zasilanie przed instalacją, konserwacją lub naprawą

EN Always switch off the power before any installation, maintenance or repair work

HU Kérem, hogy minden esetben kapcsolja ki a hálózati áramot, mielőtt beüzemelést, karbantartást vagy javítást végezne

 
CZ Před instalací, údržbou nebo opravami vždy vypněte napájení svítidla

DE Schalten Sie vor der Installation, Wartung oder Reparatur immer zuerst die Elektrizität aus


FR Toujours éteindre l'électricité pour l'installation, l'entretien ou le dépannage

5. Installation Instruction


- 1 Unscrew the optic in anticlockwise direction and take the optic out.



 - 2 Put the optics on the top of the engine.




 - 3 Fix the optic on the engine by screwing the optic in clockwise direction. The replacement finishes once hear the "click" sound.




- 4


MR16 size downlight fixture

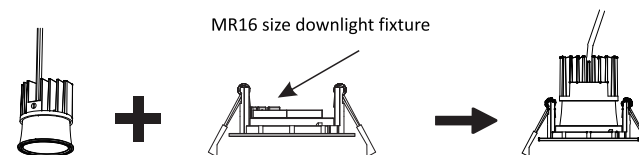


- 5 Turn off the power.

 

 
- 6 Open an appropriate hole on the ceiling.



- 7 Connect to the power.

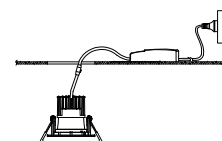

- 8 Lift up spring then put it in the hole.

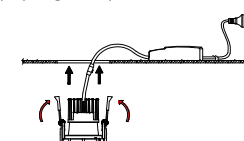

- 9 Release the spring and fixed the fixture.



- 10 Turn on the power.

